



# Header Magnet Instructions

1

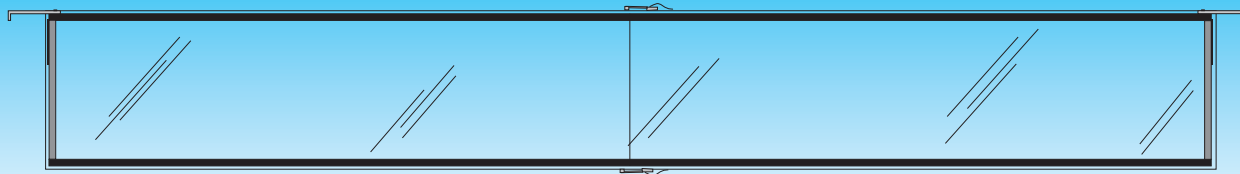

Place the two pieces of header together so that the hook and latch are side by side. With the latches hooked, the header will look something like this, although individual or custom headers may have slightly different shapes.

2

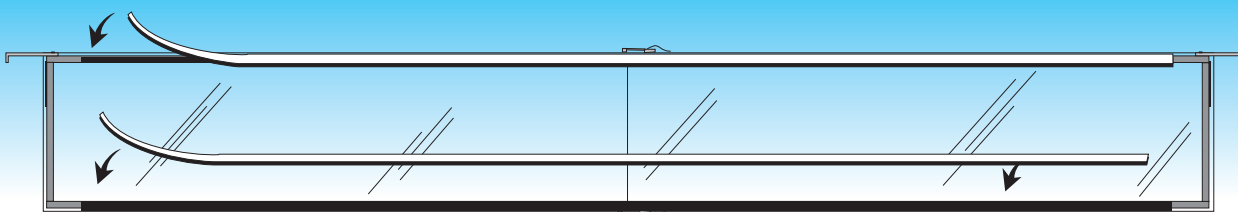


Place the supplied **new magnets** atop the old magnets on the frame. The white tape on top of the new magnets covers the adhesive which sticks them to the new header. Start to peel back one end of the tape before step 3

3




Now, place the new header onto the frame and magnets. (Allow equal amounts of overhang on each side) When this is done, press down the header onto the uncovered part of the new magnet to stick the header down. While a partner holds the header down, slide the magnet tape out to expose the rest of the adhesive. Now the header can be **smoothed** down onto the magnets.

4

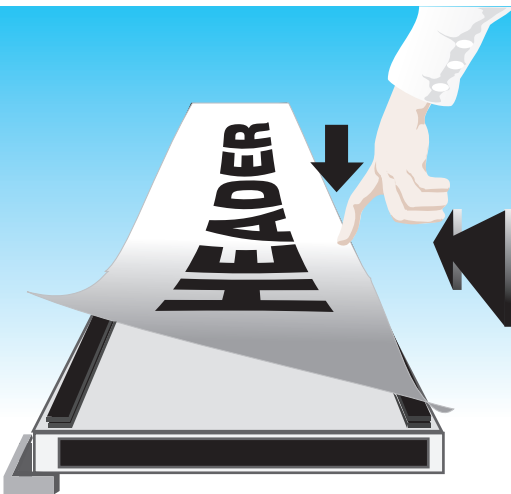

Once the white tape is pulled out, use a finger or thumb to Smooth down the header onto the magnets, this will affix the header to the adhesive. The header is now ready to use.

5

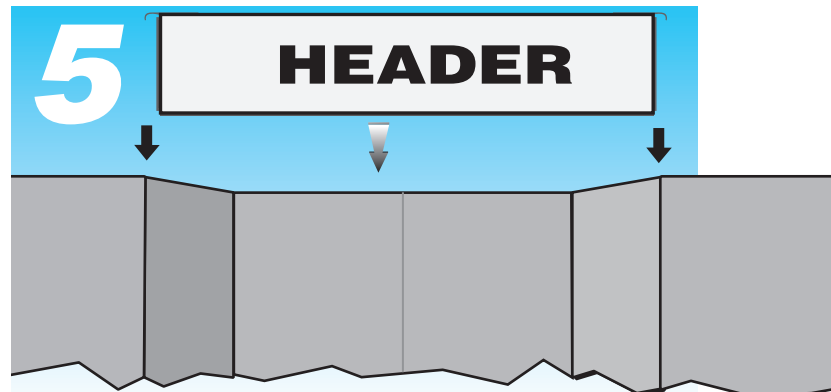

Finally, set the header upright and place it onto the unit with the hooks on the frames upper ends.

